

4000/6000 SERIES - RS232 CABLE CONNECTIONS

The Series 4000/6000 systems use a 9 pin RS232 female/female null-modem cable, for connection to a PC. If the provided cable is not long enough for your application, another cable can be used, provided it has the same wiring shown below:

PC end	4000/6000 end
1,6	4
2	3
3	2
4	1,6
5	5
7	8
8	7
9 (not connected)	9 (not connected)

Be sure to use shielded cable and limit the length of the cable to 50 feet.